

# The Creative Zone

## TAKING YOUR PHOTOGRAPHY TO THE NEXT LEVEL

The Creative zone is the name given by Canon to the shooting modes that offer you the greatest amount of control over your photography. To anyone who has been involved with photography for any period of time, these modes are known as the backbones of photography. They allow you to influence two of the most important factors in taking great photographs: *aperture* and *shutter speed*. To access these modes, you simply turn the Mode dial to the Creative mode of your choice and begin shooting. But wouldn't it be nice to know exactly what those modes control and how to make them do our bidding? Well, if you really want to take that next step in controlling your photography, it is essential that you understand not only how to control these modes, but why you are controlling them. So let's move that Mode dial to the first of our Creative modes: Program mode.

## PORING OVER THE PICTURE

Spending time near the North Island Naval Air Station gave me a great opportunity to brush up on my action photography. There are aircraft coming and going from the base at all hours of the day. During my stay I had seen a lot of training jets taking off and landing, but on this particular day I was lucky enough to catch a pair of F18s as they broke formation overhead. I didn't have much time to think but since I had been shooting other aircraft, I was pretty confident that this shot would turn out just as well. I was even lucky enough to catch some nice vapor on the jet to the right.

Because I was more concerned with motion rather than depth of field, I used the Tv (Shutter Priority) mode setting.

AI Servo focus helped lock the focus and then follow my subjects, so as I shot everything stayed sharp.





It was a bright, sunny day, so a fairly low ISO of 200 still allowed for fast shutter speeds.

The drive mode was set to Continuous so the camera could fire more than one shot.

ISO 200  
1/1250 sec.  
f/5.6  
155mm lens

## PORING OVER THE PICTURE

I know it's not really manly but I have to tell you, I have a thing for flowers. I'm not much into growing them or having them around the house; I prefer to photograph them. With so many varieties and ways of lighting and photographing them, they are always presenting me with new challenges. One of my favorite varieties to photograph is the orchid. This bunch, grown by a friend, was bursting with color and crying out to be shot, so I just had to oblige.

Although I was using a fairly fast shutter speed, I still used a tripod to eliminate any possibility of shake from handholding the camera.

It took several shots to get an accurate exposure since the dark flowers and background were fooling the camera's light meter.





I used the selective focus point to get the camera to focus on just the right spot without having to move the camera.

A black background was used to keep the emphasis on the flowers.

ISO 100  
1/125 sec.  
f/13  
105mm lens

## P: PROGRAM MODE



There is a reason that Program mode is only one click away from the Basic modes: with respect to apertures and shutter speeds, the camera is doing most of the thinking for you. So, if that is the case, why even bother with Program mode? First, let me say that it is very rare that I will use Program mode because it just doesn't give as much control over the image-making process as the other Creative modes. There are occasions, however, when it comes in handy, like when I am shooting in widely changing lighting conditions and I don't have the time to think through all of my options, or I'm not very concerned with having ultimate control of the scene. Think of a picnic outdoors in a partial shade/sun environment. I want great-looking pictures, but I'm not looking for anything to hang in a museum. If that's the scenario, why choose Program over one of the Basic modes? Because it gives me choices and control that none of the Basic modes, including Creative Auto, can deliver.

### Manual Callout

To see a comparison of all of the different modes in the Basic and Creative zones, check out the tables on pages 210–211 of your owner's manual.

### WHEN TO USE PROGRAM (P) MODE INSTEAD OF THE BASIC ZONE MODES

- When shooting in a casual environment where quick adjustments are needed
- When you want control over the ISO
- If you want or need to shoot in the Adobe RGB color space
- If you want to make corrections to the white balance

Let's go back to our picnic scenario. As I said, the light is moving from deep shadow to bright sunlight, which means that the camera is trying to balance our three photo factors (ISO, aperture, and shutter speed) to make a good exposure. From Chapter 1, we know that Auto ISO is just not a consideration, so we have already turned that feature off (you did turn it off, didn't you?). Well, in Program mode, you can choose which ISO you would like the camera to base its exposure on. The lower the ISO number, the better the quality of our photographs, but the less light sensitive the camera becomes. It's a balancing act with the main goal always being to keep the ISO as low as possible—too low an ISO, and we will get camera shake in our images from a long shutter speed; and too high an ISO means we will have an unacceptable amount of

digital noise. For our purposes, let's go ahead and select ISO 400 so that we provide enough sensitivity for those shadows while allowing the camera to use shutter speeds that are fast enough to stop motion.

### STARTING POINTS FOR ISO SELECTION

There is a lot of discussion concerning ISO in this and other chapters, but it might be helpful if you know where your starting points should be for your ISO settings. The first thing you should always try to do is use the lowest possible ISO setting. That being said, here are good starting points for your ISO settings:

- 100: Bright sunny day
- 200: Hazy or outdoor shade on a sunny day
- 400: Indoor lighting at night or cloudy conditions outside
- 800: Late night, low-light conditions or sporting arenas at night

These are just suggestions and your ISO selection will depend on a number of factors that will be discussed later in the book. You might have to push your ISO even higher as needed, but at least now you know where to start.

With the ISO selected, we can now make use of the other controls built into Program mode. By rotating the Main dial, we now have the ability to shift the program settings. Remember, your camera is using the internal light meter to pick what it believes are suitable exposure values, but sometimes it doesn't know what it's looking at and how you want those values applied (**Figures 4.1** and **4.2**). With the program shift, you can influence what the shot will look like. Do you need faster shutter speeds in order to stop the action? Just turn the Main dial clockwise. Do you want a smaller aperture so that you get a narrow depth of field? Then turn the dial counterclockwise until you get the desired aperture. The camera shifts the shutter speed and aperture accordingly in order to get a proper exposure, and you will get the benefit of your choice as a result.

**FIGURE 4.1**

(left) This is my first shot using Program mode. Because I was pointing the camera more towards the building in the shade, the exposure was longer.



**FIGURE 4.2**

(right) By zooming out and including more of the bright sky in the photo, there was less of the front of the shaded building to influence the light meter, resulting in a change of exposure.



Let's set up the camera for Program mode and see how we can make all of this come together.

### SETTING UP AND SHOOTING IN PROGRAM MODE

1. Turn your camera on and then turn the Mode dial to align the P with the indicator line.
2. Select your ISO by pressing the ISO button on the top of the camera, and then turning the Main dial to the desired setting and press the ISO button again (the ISO selection will appear in the rear LCD panel).
3. Point the camera at your subject and then activate the camera meter by depressing the shutter button halfway.
4. View the exposure information in the bottom of the viewfinder or by looking at the display panel on the back of the camera.
5. While the meter is activated, use your index finger to roll the Main dial left and right to see the changed exposure values.
6. Select the exposure that is right for you and start clicking. (Don't worry if you aren't sure what the right exposure is. We will start working on making the right choices for those great shots beginning with the next chapter.)



### FIGURE 4.3

Even the fastest of subjects can be frozen with the right shutter speed.




ISO 200  
1/1250 sec.  
f/5.6  
155mm lens

### FIGURE 4.4

Slowing down the shutter speed allows your photographs to convey a sense of movement.




ISO 500  
1/2 sec.  
f/22  
86mm lens

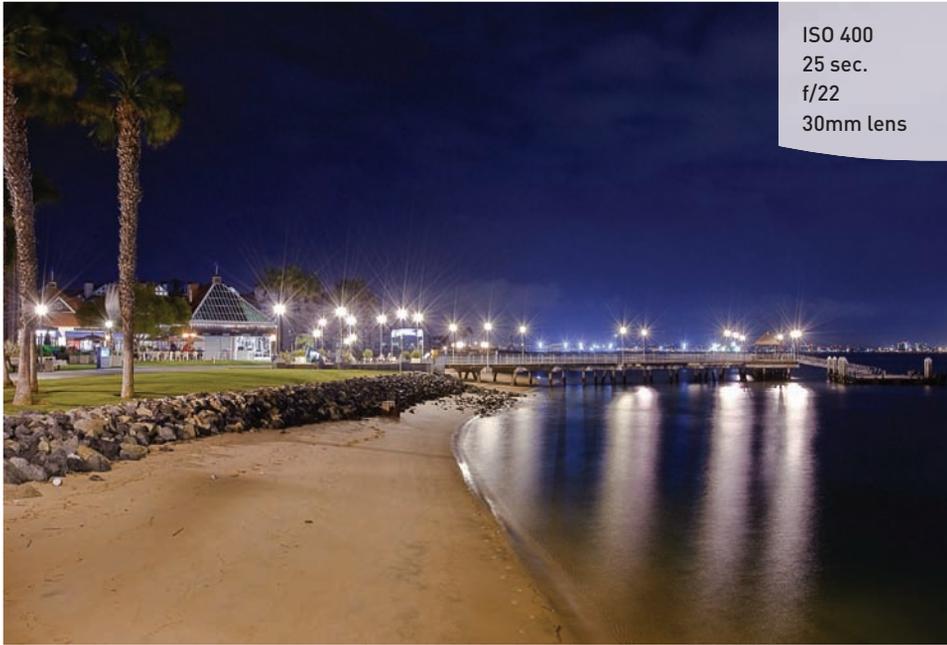

ISO 400  
25 sec.  
f/22  
30mm lens

**FIGURE 4.5**  
A long exposure coupled with a small aperture and a steady tripod helped capture this beach scene at night.

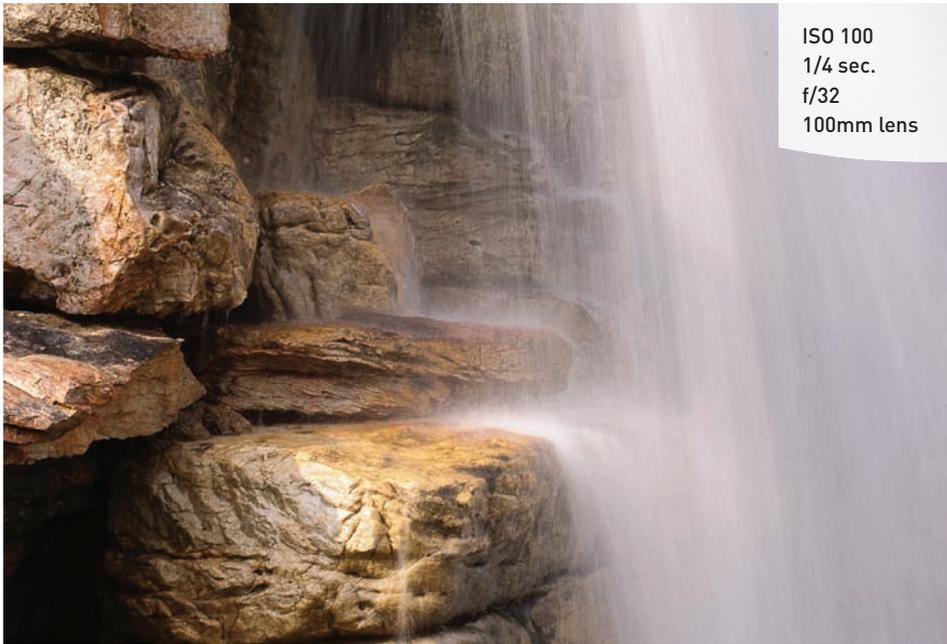

ISO 100  
1/4 sec.  
f/32  
100mm lens

**FIGURE 4.6**  
Increasing the length of the exposure time gives flowing water a silky look.

As you can see, the subject of your photo usually determines whether or not you will use Tv mode. It is important that you are able to visualize the result of using a particular shutter speed. The great thing about shooting with digital cameras is that you get instant feedback by checking your shot on the LCD screen. But what if your subject won't give you a do-over? Such is often the case when shooting sporting events. It's not like you can go ask the quarterback to throw that touchdown pass again because your last shot was blurry from a slow shutter speed. This is why it's important to know what those speeds represent in terms of their abilities to stop the action and deliver a blur-free shot.

First, let's examine just how much control you have over the shutter speeds. The T2i has a shutter speed range from 1/4000 of a second all the way down to 30 seconds. With that much latitude, you should have enough control to capture almost any subject. The other thing to think about is that Tv mode is considered a "semiautomatic" mode. This means that you are taking control over one aspect of the total exposure while the camera handles the other. In this instance, you are controlling the shutter speed and the camera is controlling the aperture. This is important because there will be times that you want to use a particular shutter speed but your lens won't be able to accommodate your request.

For example, you might encounter this problem when shooting in low-light situations: if you are shooting a fast-moving subject that will blur at a shutter speed slower than 1/125 of a second but your lens's largest aperture is f/3.5, you might see that your aperture display in your viewfinder and the rear LCD panel will begin to blink. This is your warning that there won't be enough light available for the shot—due to the limitations of the lens—so your picture will be underexposed (too dark).

Another case where you might run into this situation is when you are shooting moving water. To get that look of silky, flowing water, it's usually necessary to use a shutter speed of at least 1/15 of a second. If your waterfall is in full sunlight, you may get that blinking aperture display once again because the lens you are using only closes down to f/22 at its smallest opening. In this instance, your camera is warning you that you will be overexposing your image (too light). There are workarounds for these problems, which we will discuss later (see Chapter 7), but it is important to know that there can be limitations when using Tv mode.

## SETTING UP AND SHOOTING IN TV MODE

1. Turn your camera on and then turn the Mode dial to align the Tv with the indicator line.
2. Select your ISO by pressing the ISO button on the top of the camera, and then turning the Main dial (the ISO selection will appear in the rear LCD panel).

3. Point the camera at your subject and then activate the camera meter by depressing the shutter button halfway.
4. View the exposure information in the bottom area of the viewfinder or by looking at the rear LCD panel.
5. While the meter is activated, use your index finger to roll the Main dial left and right to see the changed exposure values. Roll the dial to the right for faster shutter speeds and to the left for slower speeds.



## AV: APERTURE PRIORITY MODE



You wouldn't know it from its name, but Av mode is one of the most useful and popular modes in the Creative zone. Av stands for Aperture Value and, like Time Value, it's another term that you'll never hear a photographer toss around. The mode, however, is one of my personal favorites, and I believe that it will quickly become one of yours, as well. Av, more commonly referred to as Aperture Priority mode, is also deemed a semiautomatic mode because it allows you to once again control one factor of exposure while the camera adjusts for the other.

Why, you may ask, is this one of my favorite modes? It's because the aperture of your lens dictates depth of field. Depth of field, along with composition, is a major factor in how you direct attention to what is important in your image. It is the controlling factor of how much area in your image is in focus. If you want to isolate a subject from the background, such as when shooting a portrait, you can use a large aperture to keep the focus on your subject and make both the foreground and background blurry. If you want to keep the entire scene sharply focused, such as with a landscape scene, then using a small aperture will render the greatest amount of depth of field possible.

### WHEN TO USE APERTURE PRIORITY (AV) MODE

- When shooting portraits or wildlife (**Figure 4.7**)
- When shooting most landscape photography (**Figure 4.8**)
- When shooting macro, or close-up, photography (**Figure 4.9**)
- When shooting architectural photography, which often benefits from a large depth of field (**Figure 4.10**)


#### FIGURE 4.7

A fairly large aperture combined with a long focal length created a very blurry background, so all the emphasis was left on the subject.



#### FIGURE 4.8

The smaller aperture setting brings sharpness to near and far objects.

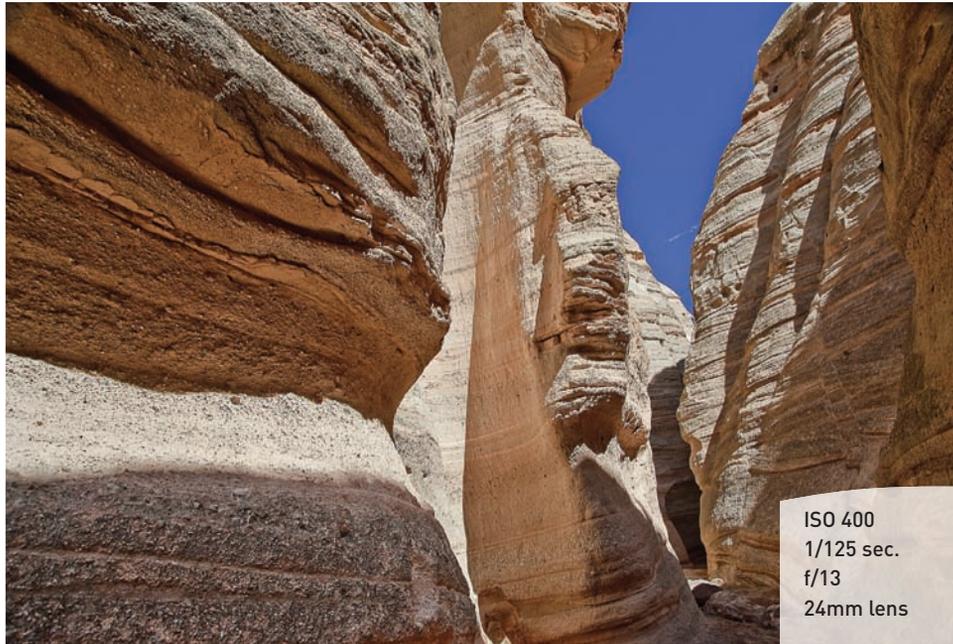

ISO 100  
1/125 sec.  
f/13  
105mm lens



**FIGURE 4.9**  
Small apertures give more sharpness in macro images.

**FIGURE 4.10**

A wide-angle lens combined with a fairly small aperture makes for a lot of depth of field.



ISO 200  
1/1000 sec.  
f/8  
30mm lens

## F-STOPS AND APERTURE

As discussed earlier, when referring to the numeric value of your lens aperture, you will find it described as an *f-stop*. The f-stop is one of those old photography terms that, technically, relates to the focal length of the lens (e.g., 200mm) divided by the effective aperture diameter. These measurements are defined as “stops” and work incrementally with your shutter speed to determine proper exposure. Older camera lenses used one-stop increments to assist in exposure adjustments, such as 1.4, 2, 2.8, 4, 5.6, 8, 11, 16, and 22. Each stop represents about half the amount of light entering the lens iris as the larger stop before it. Today, most lenses don’t have f-stop markings since all adjustments to this setting are performed via the camera’s electronics. The stops are also now typically divided into 1/3-stop increments to allow much finer adjustments to exposures, as well as to match the incremental values of your camera’s ISO settings, which are also adjusted in 1/3-stop increments.

We have established that Aperture Priority (Av) mode is highly useful in controlling the depth of field in your image. But it’s also pivotal in determining the limits of available light that you can shoot in. Different lenses have different maximum apertures. The larger the maximum aperture, the less light you need in order to achieve a properly exposed image. You will recall that, when in Tv mode, there is a limit at which you can handhold your camera without introducing movement or hand shake, which causes blurriness in the final picture. If your lens has a larger aperture, you can let in more light all at once, which means that you can use faster shutter speeds. This is why lenses with large maximum apertures, such as *f/1.4*, are called “fast” lenses.

On the other hand, bright scenes require the use of a small aperture (such as *f/16* or *f/22*), especially if you want to use a slower shutter speed. That small opening reduces the amount of incoming light, and this reduction of light requires that the shutter stay open longer.

## SETTING UP AND SHOOTING IN AV MODE

1. Turn your camera on and then turn the Mode dial to align the Av with the indicator line.
2. Select your ISO by pressing the ISO button on the top of the camera, and then turning the Main dial.
3. Point the camera at your subject and then activate the camera meter by depressing the shutter button halfway.
4. View the exposure information in the bottom area of the viewfinder or by looking at the rear display panel.

5. While the meter is activated, use your index finger to roll the Main dial left and right to see the changed exposure values. Roll the dial to the right for a smaller aperture (higher f-stop number) and to the left for a larger aperture (smaller f-stop number).

## ZOOM LENSES AND MAXIMUM APERTURES

Some zoom lenses (like the 18–55mm kit lens) have a variable maximum aperture. This means that the largest opening will change depending on the zoom setting. In the example of the 18–55mm zoom, the lens has a maximum aperture of f/3.5 at 18mm and only f/5.6 when the lens is zoomed out to 55mm.

## M: MANUAL MODE



Once upon a time, long before digital cameras and program modes, there was manual mode. In those days it wasn't called "manual mode" because there were no other modes. It was just photography. In fact, many photographers, including myself, cut their teeth on completely manual cameras. Let's face it—if you want to learn the effects of aperture and shutter speed on your photography, there is no better way to learn than by setting these adjustments yourself. However, today, with the advancement of camera technology, many new photographers never give this mode a second thought. That's truly a shame, as not only is it an excellent way to learn your photography basics, it's also an essential tool to have in your photographic bag of tricks.

When you have your camera set to Manual (M) mode, the camera meter will give you a reading of the scene you are photographing. It's your job, though, to set both the f-stop (aperture) and the shutter speed to achieve a correct exposure. If you need a faster shutter speed, you will have to make the reciprocal change to your f-stop. Using any other mode, such as Tv or Av, would mean that you just have to worry about one of these changes, but Manual mode means you have to do it all yourself. This can be a little challenging at first, but after a while you will have a complete understanding of how each change affects your exposure, which will, in turn, improve the way that you use the other modes.

## WHEN TO USE MANUAL (M) MODE

- When learning how each exposure element interacts with the others (**Figure 4.11**)
- When your environment is fooling your light meter and you need to maintain a certain exposure setting (**Figure 4.12**)
- When shooting silhouetted subjects, which requires overriding the camera's meter readings (**Figure 4.13**)



**FIGURE 4.11**

Using manual mode allows you to use exposure settings that your camera would never select if placed in an automatic mode. This image was purposely underexposed to keep the sky dark.

### FIGURE 4.12

Beaches and snow are always a challenge for light meters.

ISO 200  
1/200 sec.  
f/11  
38mm lens



### FIGURE 4.13

Although the meter was doing a pretty good job of exposing for the bright sky, I used Manual mode to push the foreground elements into complete black silhouette.

ISO 200  
1/500 sec.  
f/8  
70mm lens



## SETTING UP AND SHOOTING IN MANUAL MODE

1. Turn the Mode dial to align the M with the indicator line.
2. Select your ISO by pressing the ISO button on the top of the camera, and then turning the Main dial.
3. Point the camera at your subject and then activate the camera meter by depressing the shutter button halfway.
4. View the exposure information in the bottom area of the viewfinder or by looking at the rear display panel.
5. While the meter is activated, use your index finger to roll the Main dial left and right to change your shutter speed value until the exposure mark is lined up with the zero mark. The exposure information is displayed by a scale with marks that run from -2 to +2 stops. A “proper” exposure will line up with the arrow mark in the middle. As the indicator moves to the left, it is a sign that you will be underexposing (there is not enough light on the sensor to provide adequate exposure). Move the indicator to the right and you will be providing more exposure than the camera meter calls for. This is overexposure.
6. To set your exposure using the aperture, depress the shutter release button until the meter is activated. Then, using your thumb, hold in on the Av button on the back of the camera and then use your index finger to turn the Main dial right for a smaller aperture (large f-stop number) or left for a larger aperture (small f-stop number).



## A-DEP: AUTO DEPTH OF FIELD MODE



The A-DEP, or Auto Depth of Field, setting is on the Creative zone side of the dial, but in my opinion it should be over in the Basic zone. The mode works this way: As you depress the shutter release button to focus on your subject, the camera will use the other focus points to measure the distance of the other objects in the viewfinder. Then, it will determine what the appropriate aperture setting is to render all of the objects in focus (**Figure 4.14**). The only way to adjust your exposure is to change the ISO. There will be more discussion of the A-DEP mode and how to use it in Chapter 7.

**FIGURE 4.14**

Landscapes with subjects that are at differing distances could benefit from the A-DEP mode.



ISO 400  
1/100 sec.  
f/14  
20mm lens

## HOW I SHOOT: A CLOSER LOOK AT THE CAMERA SETTINGS I USE

The great thing about working with a dSLR camera is that I can always feel confident that some things will remain unchanged from camera to camera. For me, these are the Aperture Priority (Av) and Shutter Priority (Tv) shooting modes. Although I like to think of myself as a generalist in terms of my photography, I do tend to lean heavily on the landscape and urban photography genres. Working in these areas means that I am almost always going to be concerned with my depth of field. Whether it's isolating my subject with a large aperture or trying to maximize the overall sharpness of a sweeping landscape, I always keep an eye on my aperture setting.

If I do have a need to control the action, I use Shutter Priority. If I am trying to create a silky waterfall effect, I can depend on Tv to provide that long shutter speed that it will deliver. Maybe I am shooting a motocross jumper. I definitely need the fast shutter speeds that will freeze the fast-moving action. While the other camera modes have their place, I think you will find that, like myself and most other working pros, you will use the Av and Tv modes for 90 percent of your shooting.


The other concern that I have when I am setting up my camera is just how low I can keep my ISO. I raise the ISO only as a last resort because each increase in sensitivity is an opportunity for more digital noise to enter my image. To that end, I always have the High ISO Noise Reduction feature turned on (see Chapter 7).

To make quick changes while I shoot, I often use the Exposure Compensation feature (covered in Chapter 7) so that I can make small over- and underexposure changes. This is different than changing the aperture or shutter; it is more like fooling the camera meter into thinking the scene is brighter or darker than it actually is.

One of the reasons I change my exposure is to make corrections when I see the "blinkies" while looking at my images on the rear LCD. Blinkies are the warning signal that part of my image has been overexposed to the point that I no longer have any detail in the highlights. The highlight alert will flash wherever the potential exists for overexposure. The only unfortunate thing about this feature is that it doesn't work with the full-screen preview mode. You have to set your camera display for the Histogram mode and then you will see the highlight alert (**Figure 4.15**).

**FIGURE 4.15**  
The T2i's highlight alert screen.

The flashing black areas are alerting me that these highlights are overexposed and will lose detail.

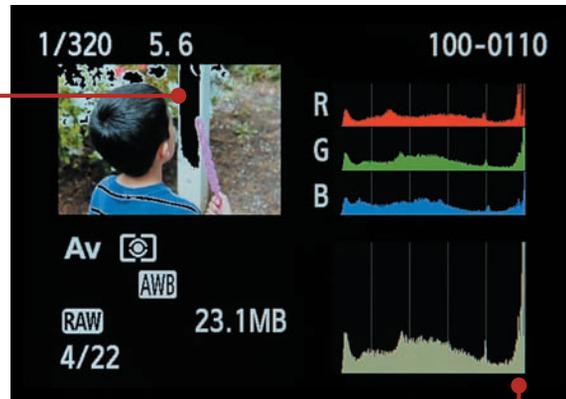

Notice how the histogram is pushed up against the right side of the image.

As you work your way through the coming chapters, you will see other tips and tricks I use in my daily photography, but the most important tip I can give is that you take the time to understand the features of your camera so that you can leverage the technology in a knowledgeable way. This will result in better photographs.

## Chapter 4 Assignments

The information covered in this chapter will define how you work with your camera from this point on. Granted, there may be times that you just want to grab some quick pictures and will resort to the Basic zone, but to get serious with your photography, you should learn the modes in the Creative zone.

### Starting off with Program mode

Set your camera on Program mode and start shooting. Become familiar with the adjustments you can make to your exposure by turning the Main dial. While shooting, make sure that you keep an eye on your ISO.

## Learning to control time with the Tv mode

Find some moving subjects and then set your camera to Tv mode. Have someone ride their bike back and forth or even just photograph cars as they go by. Start with a slow shutter speed of around 1/30 of a second and then start shooting with faster and faster shutter speeds. Keep shooting until you can freeze the action. Now find something that isn't moving, like a flower, and work your shutter speed from something fast like 1/500 of a second and then work your way down to about 1/4 of a second. The point is to see how well you can handhold your camera before you start introducing hand shake into the image.

## Controlling depth of field with the Av mode

The name of the game with Av mode is depth of field. Set up three items in equal distance from you. I would use chess pieces or something similar. Now focus on the middle item and set your camera to the largest aperture that your lens allows (remember, large aperture means a small number like f/3.5). Now, while still focusing on the middle subject, start shooting with ever-smaller apertures until you are at the smallest f-stop for your lens. If you have a zoom lens, try doing this exercise with the lens at the widest and then the most telephoto settings. Now move up to subjects that are farther away, like telephone poles, and shoot them in the same way. The idea is to get a feel for how each aperture setting affects your depth of field.

## Giving and taking with Manual mode

Go outside on a sunny day and, using the camera in Manual mode, set your ISO to 100, your shutter speed to 1/125 of a second, and your aperture to f/16. Now press your shutter release button to get a meter reading. You should be pretty close to that zero mark. If not, make small adjustments to one of your settings until it hits that mark. Now is where the fun begins. Start moving your shutter speed slower, to 1/60, and then set your aperture to f/22. Now go the other way. Set your aperture on f/8 and your shutter speed to 1/500. Now review your images. If all went well, all the exposures should look the same. This is because you balanced the light with reciprocal changes to the aperture and shutter speed. Now go back to our original setting of 1/125 at f/16 and try just moving the shutter speed without changing the aperture. Just make 1/3-stop changes (1/125 to 1/100 to 1/80 to 1/60), and then review your images to see what a 1/3 stop of overexposure looks like. Then do the same thing going in the opposite way. It's hard to know if you want to over- or underexpose a scene until you have actually done it and seen the results.

*Share your results with the book's Flickr group!*

*Join the group here: [flickr.com/groups/canonrebel2i550dfromsnapshottogreatshots](https://www.flickr.com/groups/canonrebel2i550dfromsnapshottogreatshots)*